



Instruction Manual

Freezer

MODEL :


ACF-131CNE

ACF-186CNE

ACF-259CNE

ACF-324CNE

ACF-384CNE

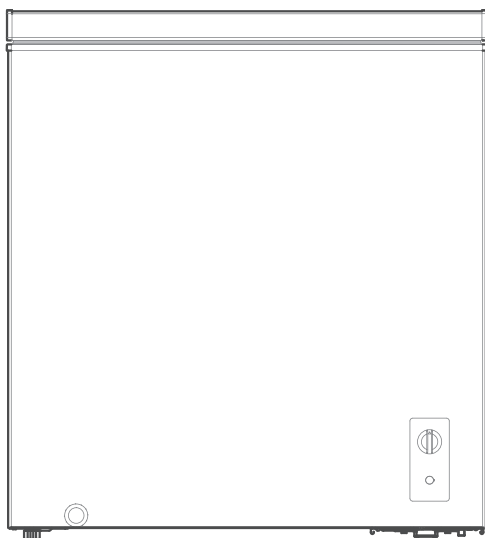

www.arielli.bg



Please read the Manual carefully before use.
The Manual shall be kept in good custody for
later reference

CONTENTS

1 Safety warnings	
1.1 Warning	1
1.2 Meaning of safety warning symbols	3
1.3 Electricity-related matters	3
1.4 Matters related to use.....	4
1.5 Matters relating to the placement of items	5
1.6 Warnings for energy	5
1.7 Matters related to disposal	5
2 The correct usage of freezer	
2.1 Names of each component	6
2.2 Temperature control panel.....	7
2.3 Placement	7
2.4 Changing the light (optional)	8
2.5 Start	8
2.6 Energy saving tips	8
3 Maintenance and service of freezer	
3.1 Cleaning	9
3.2 Defrost.....	9
3.3 When out of use	9
4 Trouble shooting	10

1 Safety warnings

1.1 Warning



Warning: risk of fire/flammable materials

THIS appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.

THIS appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

CHILDREN should be supervised to ensure that they do not play with the appliance.

IF the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

DO not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

THE appliance has to be unplugged after use and before carrying out user maintenance on the appliance.

WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING: Do not damage the refrigerant circuit.

WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

WARNING: Please abandon the refrigerator according to local regulators for its use of flammable blowing gas and refrigerant.

WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.

WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

DO not use extension cords or ungrounded (two prong) adapters.

DANGER: Risk of child entrapment. Before you throw away your old refrigerator or freezer:

-Take off the doors.

-Leave the shelves in place so that children may not easily climb inside.

THE refrigerator must be disconnected from the source of electrical supply before attempting the installation of accessory.

REFRIGERANT and cyclopentane foaming material used for the appliance are flammable.

Therefore, when the appliance is scrapped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification other than be disposed by combustion, so as to prevent damage to the environment or any other harm.

THE necessity that, for doors or lids fitted with locks and keys, the keys be kept out of the reach of children and not in the vicinity of the refrigerating appliance, in order to prevent children from being locked inside.

FOR EU standard: This appliance can be used by children aged from 8 years and above and persons with reduce physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

TO avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Clean water tanks if they have not been used for 48 h; flush the water system connected to a water supply if water has not been drawn for 5 days. (note 1)
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes. (note 2)
- One-, two- and three-star compartments are not suitable for the freezing of fresh food. (note 3)
- For appliances without a 4-star compartment: this refrigerating appliance is not suitable for freezing foodstuffs. (note 4)
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

Note 1,2,3,4: Please confirm whether it is applicable according to your product compartment type.

FOR a freestanding appliance: this refrigerating appliance is not intended to be used as a built-in appliance.

ANY replacement or maintenance of the LED lamps is intended to be made by the manufacturer, its service agent or similar qualified person. (See chapter 2.4 for lamp replacement)

WARNING: To avoid a hazard due to instability of the appliance, it must be fixed in accordance

WARNING: Connect to potable water supply only. (Suitable for ice making machine)

TO Prevent A Child From Being Entrapped, Keep Out Of Reach Of Children And Not In The Vicinity Of Freezer (Or Refrigerator). (Suitable for products with locks)

1.2 Meaning of safety warning symbols



Prohibition
symbol

This symbol indicates prohibited matters which the behaviors related to must be prohibited. Failure to follow instructions may result in damage to the product or endanger the user's personal safety.



Warning symbol

This symbol indicates matters that must be complied with and which the behaviors related to must be carried out in strict accordance with the required operation.

Failure to follow instructions may result in damage to the product or endanger the user's personal safety.




Note symbol


This symbol indicates matters requiring attention, which the behaviors related to require special attention. If left unguarded, this could result in minor or moderate injuries or product damage.

This Manual contains a lot of important safety information, please be sure to follow all of it.

1.3 Electricity-related matters

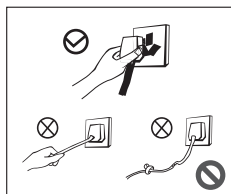


- Do not pull on the power line when unplugging the freezer. Be sure to hold the plug firmly and pull it straight out of the socket.
- For safe use, do not damage the power line at any time, and do not use the power line when it is broken or the plug is worn.
- If the power line is worn or damaged, it must be replaced at the manufacturer's designated service point.

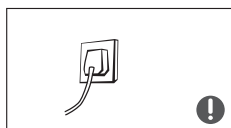

- The power line plug should be kept in firm contact with the socket, otherwise it may cause a fire. Please ensure that the grounding electrode of the socket should have a reliable ground wire.




- When flammable gases, such as coal gas, leak, you should first close the valve that causes the gas leak, and then open the doors and windows. At this time, do not pull out the plugs of electrical appliances, such as freezer, so as to avoid electric sparks causing a fire.

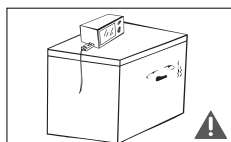


- For safety, it is recommended that electrical sockets, voltage stabilizers, rice cookers, microwave ovens, and other appliances are not placed on top of the freezer; and that appliances are not used in the food storage room of the appliance, except for the type recommended for use by the manufacturer.


1.4 Matters related to use

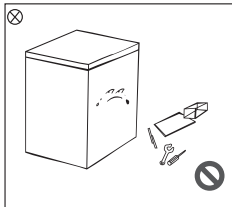


- It is strictly prohibited to privately disassemble and remodel the freezer, and to damage the refrigeration pipeline, and the maintenance of the freezer must be carried out by professional personnel.
- To avoid danger, if the supply cord is damaged, it must be replaced by the manufacturer, its maintenance department, and relevant professionals.

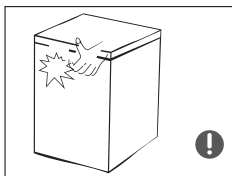

- There are small gaps between the doors and between the door and the freezer case, so be careful not to put your hand in these areas to prevent squeezing your fingers. When opening and closing the freezer door, do not use excessive force to prevent items from falling.
- After the freezer starts running, do not reach for food or containers in the freezer with wet hands, especially metal containers, to avoid frostbite on your hands.

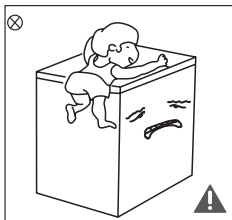


- Do not allow children to enter or climb on the freezer to avoid sealing children into the freezer or the freezer falling down, which may cause injury to children.
- Do not spray or rinse the freezer with water, and do not place the freezer in a damp, easily splashed place, and do not fill or load the freezer with water to avoid affecting the electrical insulation of the freezer, which may even lead to electric shock, fire and other accidents.

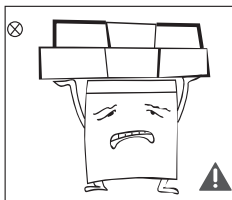


Please do not place heavy objects on the top of the freezer, as it is easy to cause the objects to fall down when closing the door, resulting in accidental damage.

1.5 Matters relating to the placement of items

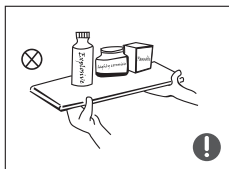

- Please do not place flammable, explosive, volatile and highly corrosive items into the freezer, so as not to cause product damage or fire and other accidents.
- Do not place or use combustible items near the freezer to avoid a fire.

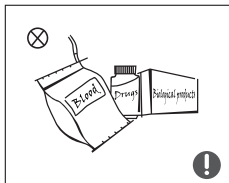

- This product is a household refrigeration appliance, and according to national standards, it is only suitable for storing food, and cannot be used for other purposes, such as storing blood, medicines and biological products.



- Please do not put bottled or closed containers of fluid items such as bottled beer, drinks, etc. into the freezer to avoid freezing and cracking, which may cause other losses.

1.6 Warnings for energy

- Freezer might not operate consistently when sited for an extended period of time below the cold end of the range of temperatures for which the freezer appliance is designed.
- The fact that effervescent drinks should not be stored in food freezer compartments or cabinets or in low-temperature compartments or cabinets, and that some products such as water ices should not be consumed too cold;
- The need to not exceed the storage time recommended by the food manufacturers for any kind of food and particularly for commercially quick-frozen food in food-freezer and frozen-food storage compartments or cabinets;
- The precautions necessary to prevent an undue rise in the temperature of the frozen food while defrosting the refrigerating appliance, such as wrapping the frozen food in several layers of newspaper.
- The fact that a rise in temperature of the frozen food during manual defrosting, maintenance or cleaning could shorten the storage life.
- The necessity that, for doors or lids fitted with locks and keys, the keys be kept out of the reach of children and not in the vicinity of the freezer appliance, in order to prevent children from being locked inside.

1.7 Matters related to disposal

The refrigerant and cyclopentane foaming material used in this freezer are flammable materials, and the used freezer should be isolated from sources of ignition and cannot be burned for disposal. Please hand over to qualified professional recycling company for disposal to avoid harming the environment or causing other dangers.



When the freezer is abandoned and not in use, please remove the door of the freezer, and remove the door seal and shelf basket, and place the door and shelf basket in a suitable position, so as to avoid children from entering and playing, which may cause accidents.




Properly dispose of the product:

This symbol means that throughout the European Union, this product is not suitable to be disposed of with other household waste. To avoid causing potential danger to environment or human health because of uncontrolled waste treatment, recycle the waste to promote the sustainable reuse of material. In order to recycle the used devices, please use the recycle system or collecting system, or contact the product retailers. They can guarantee that the recycling process is environmental friendly and safe.

2 The correct usage of freezer

2.1 Names of each component

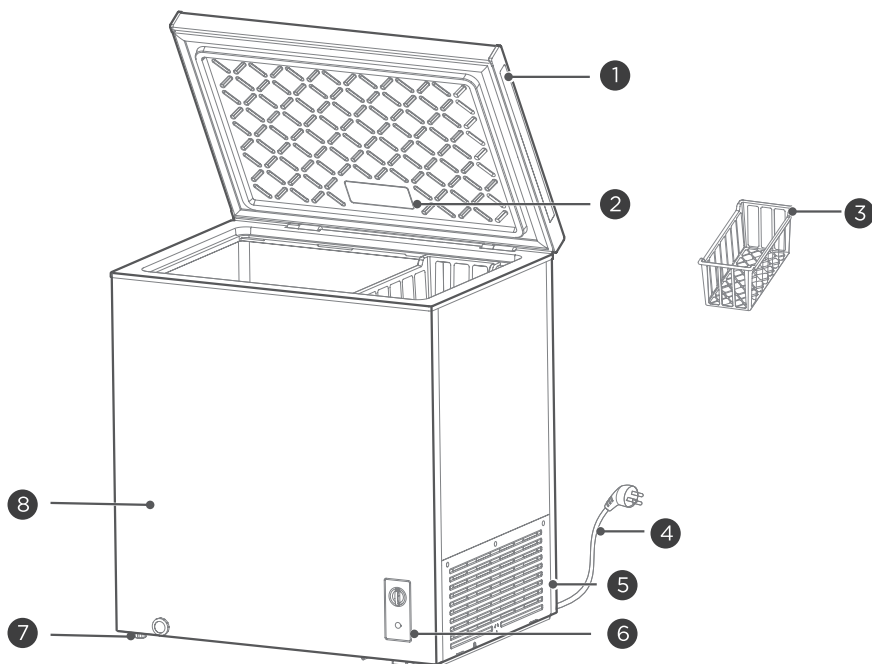

1	Door handle	5	Shutter
2	Lamp (optional)	6	Temperature control panel
3	Shelving basket	7	Leveling foot
4	Power cord	8	Cabinet

(The above pictures are for reference only, and the actual configuration shall be subject to the actual purchase or the seller's statement)


- The freezer can maintain the freshness of food for a long time at low temperatures. It is mainly used for storing frozen food and making ice cubes.
- The freezer is suitable for storing meat, fish, shrimp, and pastries that are not to be consumed in the short term. It is not suitable for storing fluids in bottled or sealed containers, such as bottled beer or beverages.
- Please note that the food should be consumed by its expiration date.
- The freezing speed of the product depends on the amount of food stored and the ambient temperature. If too much food at room temperature is placed at once, it is recommended to set the temperature controller to the maximum level and operate it for 24 hours in advance or use ice cubes for cooling. Moreover, large pieces of food should be divided into small pieces and stored separately to ensure proper freezing. Otherwise, certain parts of large or excessive food may not freeze properly, leading to potential spoilage.

Reminder:

Due to the wear and tear of the hinge during long-term opening and closing, the hinge's service life could be affected and noise may occur. It is recommended that users regularly apply lubricating oil to the hinges for maintenance, which can effectively eliminate noise and extend the service life of the hinges.

2.2 Temperature control panel


control panel with indicator light :

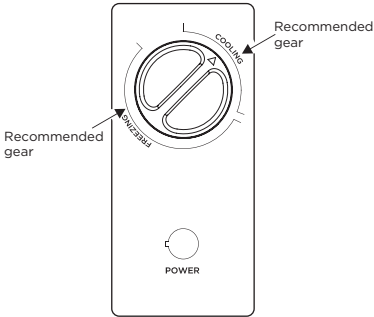


- After power on the "POWER" indicator light will be light(green).
- The area where the temperature controller knob points to "COOLING" is the refrigeration area, and "FREEZING" is the frozen area;
- When the temperature controller knob is turned clockwise, the temperature inside the freezer decreases;
- When the temperature controller knob is turned counterclockwise, the temperature inside the freezer increases;
- Please refer to the schematic diagram to identify the "recommended gear".

(The above pictures are for reference only, and the actual configuration shall be subject to the actual purchase or the seller's statement)


2.3 Placement

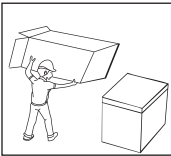


- Before using the freezer, please remove all the package, which includes the base pad, the foam cushion block in the freezer and adhesive tape, etc. And tear off the protective film on the door body and case.

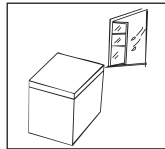

- Place the freezer in a well-ventilated indoor area with a flat and sturdy ground.

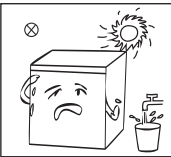

- Select the place that is far away from the heat source and direct sunlight Do not place it in damp or watery areas to prevent rusting or weakening the insulation effect.

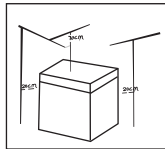


- The top space of the freezer should be greater than 70cm and the distance between the sides and back of the freezer and the wall should be greater than 20cm, so as to facilitate the opening and closing of the freezer door and heat dissipation.

2.4 Changing the light (optional)


The LED light must be replaced by a professional from the manufacturer, its maintenance department or other similar departments.

(The above are for reference only, and the actual configuration shall be subject to the actual purchase or the seller's statement)


2.5 Start

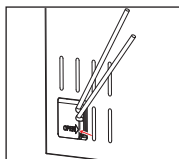


- Taking a tool (flat screwdriver or cone), insert it into the gap at the arrow position in the figure and gently pry it outward to open the flip.

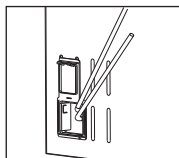

- After opening, the freezer is as shown in the figure. Next, take out the power line from the hole;

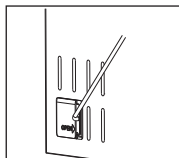

- After removing the power line, cover the cover plate again.

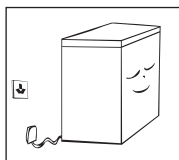

- After transportation, please let the freezer stand for at least 2 hours before connecting to the power supply, otherwise it may cause performance degradation or damage to the freezer.
Before storing fresh or frozen food in the freezer, run the freezer for 2 to 3 hours; in hot summer days, users should run the freezer for 4 hours in advance.
During the power cut or cleaning, users should pull the plug off and plug in again after a 5-minute interval in case the continuous start damage the compressor.

(The above are for reference only, and the actual configuration shall be subject to the actual purchase or the seller's statement)

2.6 Energy saving tips

- The appliance should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of the direct sunlight.
Let hot foods cool to room temperature before placing in the appliance. Overloading the appliance forces the compressor to run longer. Foods that freeze too slowly may lose quality, or spoil. Be sure to wrap foods properly, and wipe containers dry before placing them in the appliance. This cuts down on frost build-up inside the appliance.
Appliance storage bin should not be lined with aluminum foil, wax paper, or paper toweling. Liners interfere with cold air circulation, making the appliance less efficient.
Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.

3 Maintenance and service of freezer

3.1 Cleaning

- Please clean the dust behind and around the freezer on time to improve heat dissipation and save energy.
- Regularly inspect the door seal to ensure it is clean and free of debris. Clean the door seal with a soft cloth dipped in soapy water or diluted cleaning agent.
- The interior of the freezer should be regularly cleaned to avoid odor.
- Before cleaning the interior of the freezer, please turn the power off, take out all the food, hanging baskets and containers.
- Please use a soft cloth or sponge to clean the inner liner of the freezer. You can use two tablespoons of baking soda and one quart of warm water solution to clean it first, then clean it with clean water and wipe it clean. After cleaning, open the door and let it dry naturally before connecting to the power supply.
- For areas inside the freezer that are not easy to clean (e.g. gaps or corners), it is recommended to use soft cloths, soft brushes, etc. and some necessary aids (e.g. thin sticks, etc.) to carry out regular cleaning to ensure that there are no accumulation of pollutants or bacteria.
- Do not use soaps, detergents, spray cleaners, etc. to clean the liner as these may create odors or contamination.
- Clean the hanging basket with a soft cloth dipped in soapy water or diluted cleaning agent, and then dry it with a soft cloth or air dry naturally.
- Wipe the outside surface of the freezer with a soft cloth moistened with soapy water, detergent, etc., and then dry with a soft cloth.
- Do not use hard hairbrush, steel wire brush, steel wire brush, abrasive (such as toothpaste), organic solvent (such as alcohol, acetone, isoamyl acetate, etc.), boiling water, or acidic or alkaline substances during cleaning, as it may damage the surface and inner liner of the freezer. Organic solvents such as boiling water and benzene may deform or damage plastic parts.
- Do not rinse directly with water or other liquids during cleaning to avoid short circuit or affecting electrical insulation performance after soaking.



When defrosting and cleaning the freezer, unplug the power supply first.

3.2 Defrost

- Freezers need to be manually defrosted:
When defrosting, please unplug the power plug first, open the freezer door, and take out indoor food, hanging baskets, etc.; Open the drain hole and outlet hole (and place a water container at the outlet hole) to allow the indoor ice and frost to naturally melt, and dry the defrosting water with a dry soft cloth. Once the frost softens, you can use an ice shovel to speed up deicing.
- When defrosting, please keep the removed food in a cool place before removing the accessories.



Do not use mechanical devices or other means of acceleration other than those recommended by the manufacturer. The refrigeration circuit must not be damaged.

3.3 When out of use

- In case of power failure: Even in the summer, food can still be stored for several hours; During this period, the number of opening door should be reduced, and fresh food should not be put in.
- When not in use for a long period of time: unplug the power supply, then clean the freezer and keep the freezer door open to prevent the freezer from generating odors.
- When moving the freezer: Do not invert, transport horizontally, or vibrate the freezer during transportation. The inclination angle during transportation should not exceed 45°. Do not grab the door or hinge while moving.



Once the freezer is activated, it is best to use it continuously, and under normal circumstances, do not stop using the freezer, so as not to affect the service life.

4 Trouble shooting

For some of the following simple problems, you can try to solve them by yourself. If there is no improvement, please call the after-sales service department.

The freezer does not work	Whether the power supply is connected and the plug is firmly inserted Whether the voltage is too low Whether the temperature control knob is in the work area Is there a power outage or partial circuit tripping
The freezer smells bad	Odorous food should be tightly packed Check for rotten food The interior of the freezer needs to be cleaned
Long term operation of the compressor	It is normal for freezers to work for a long time due to high temperatures in summer Do not put too much food into the freezer at one time. Put the food into the freezer after it has cooled down Open the freezer door too often The frost layer of the freezer is too thick (defrosting is required at this time)
The freezer light does not light up	Whether the freezer is powered on and whether the indicator light is damaged
The freezer door cannot be closed correctly	The food package is jammed so the door cannot be closed Too much food has been put in Freezer tilts
Loud noise	Whether the ground is flat and the freezer is placed stably Whether the accessories of the freezer are placed in the normal position
It is difficult to open the freezer for a short time	After the refrigeration of the freezer, there is a pressure difference between the inside and outside of the case, which can cause a temporary difficulty in opening the door. This is a normal physical phenomenon.
Case emits heat External condensation	When the freezer is running, the outer shell of the case will generate heat, even generating more heat in the early stages of operation and summer. This is caused by the heat dissipation of the condenser and is a normal phenomenon. When the environmental humidity is high, there may be condensation on the surface of the case and the door seal, which is a normal phenomenon. Wipe dry with a dry towel.
Airflow sound Buzzing sound Clattering sound	The refrigerant circulating in the refrigeration pipeline will produce an eruption sound and a grunt sound, which is a normal sound and will not affect the cooling effect. The compressor produces a buzzing sound during operation, and the sound is loud when starting or stopping. The electromagnetic valve or electric switching valve will make a clattering sound, which is a normal phenomenon and will not affect its use.

Table 1 Climate classes

Class	Symbol	Ambient temperature range °C
Extended temperate	SN	+ 10 to + 32
Temperate	N	+ 16 to + 32
Subtropical	ST	+ 16 to + 38
Tropical	T	+ 16 to + 43

Extended temperate: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 10 °C to 32 °C';

temperate: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C';

Subtropical: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 38 °C';

Tropical: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 43 °C';

Special for new European standard

- The ordered parts in the following table can be acquired from channel _:

Ordered Part	Provided by	Minimum Time Required for Provision
thermostats	Professional maintenance personnel	At least 7 years after the last model is launched on the market
temperature sensors	Professional maintenance personnel	At least 7 years after the last model is launched on the market
printed circuit boards	Professional maintenance personnel	At least 7 years after the last model is launched on the market
light sources	Professional maintenance personnel	At least 7 years after the last model is launched on the market
door handles	Professional repairers and final users	At least 7 years after the last model is launched on the market
door hinges	Professional repairers and final users	At least 7 years after the last model is launched on the market
trays	Professional repairers and final users	At least 7 years after the last model is launched on the market
baskets	Professional repairers and final users	At least 7 years after the last model is launched on the market
door gaskets	Professional repairers and final users	At least 10 years after the last model is launched on the market

- The shortest period for providing after-sales spare parts is 15 working days.
- The model information and model identification in the product database can be obtained by scanning the web link on the QR code (if any) on the product energy efficiency label.

Dear customer

1. If you want to return or replace the product, please contact the store where you buy.

(Remember to bring the purchase invoice)

2. If your product breaks down which needs to repair, please contact after-sales service provider.

Telephone:

Email address:



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the collection systems or contact the retailer where the product was purchased. They return and can take this product for environmental safe recycling. There are separate collection systems for used electrical and electronic products. Please help us keep the environment clean.



This product is designed and corresponds to all European directives and requirements.

Product Information Sheet

COMMISSION DELEGATED REGULATION (EU) 2019/2016

Supplier's name or trademark: Arielli

Supplier's address: Suhodolska 54, 1373 Sofia, BG

Model identifier: ACF-131CNE

Type of refrigerating appliance:

Low-noise appliance:	No	Design type:	freestanding
Wine storage appliance:	No	Other refrigerating appliance:	Yes

General product parameters:

Parameter		Value	Parameter	Value
Overall dimensions (millimetre)	Height	850	Total volume (dm ³ or l)	99
	Width	547		
	Depth	446		
EEI		100	Energy efficiency class	E
Airborne acoustical noise emissions (dB(A) re 1 pW)		38	Airborne acoustical noise emission class	C
Annual energy consumption (kWh/a)		169	Climate class:	extended temperate, temperate, subtropical,
Minimum ambient temperature (°C), for which the refrigerating appliance is suitable		10	Maximum ambient temperature (°C), for which the refrigerating appliance is suitable	38
Winter setting		No		

Compartment Parameters:

Compartment parameters and values					
Compartment type		Compartment volume (dm ³ or l)	Recommended temperature setting for optimised food storage (°C) These settings shall not contradict the storage conditions set out in Annex IV, Table 3	Freezing capacity (kg/24h)	Defrosting type (auto-defrost=A, manual defrost=M)
Pantry	No	-	-	-	-
Wine storage	No	-	-	-	-
Cellar	No	-	-	-	-
Fresh food	No	-	-	-	-

Chill	No	-	-	-	-
0-star or ice-making	No	-	-	-	-
1-star	No	-	-	-	-
2-star	No	-	-	-	-
3-star	No	-	-	-	-
4-star	No	-	-	-	-
2-star section	No	-	-	-	-
Variable temperature compartment	compartment types	99	+4 or -18	4.5(for 4-star compartments) or -	M
For 4-star compartments					
Fast freeze facility			No		
Light source parameters:					
Type of light source			-		
Energy efficiency class			-		
Minimum duration of the guarantee offered by the manufacturer: 24 months					
Additional information:					
Weblink to the manufacturer's website, where the information in point4(a) Annex of Commission Regulation (EU) 2019/2019 is found: www.techmart.bg					

Product Information Sheet

COMMISSION DELEGATED REGULATION (EU) 2019/2016

Supplier's name or trademark: Arielli

Supplier's address: Suhodolska 54, 1373 Sofia, BG

Model identifier: ACF-186CNE

Type of refrigerating appliance:

Low-noise appliance:	No	Design type:	freestanding
Wine storage appliance:	No	Other refrigerating appliance:	Yes

General product parameters:

Parameter		Value	Parameter	Value
Overall dimensions (millimetre)	Height	850	Total volume (dm ³ or l)	143
	Width	600		
	Depth	560		
EEI		100	Energy efficiency class	E
Airborne acoustical noise emissions (dB(A) re 1 pW)		40	Airborne acoustical noise emission class	C
Annual energy consumption (kWh/a)		182	Climate class:	extended temperate, temperate, subtropical,
Minimum ambient temperature (°C), for which the refrigerating appliance is suitable		10	Maximum ambient temperature (°C), for which the refrigerating appliance is suitable	38
Winter setting		No		

Compartment Parameters:

Compartment parameters and values					
Compartment type		Compartment volume (dm ³ or l)	Recommended temperature setting for optimised food storage (°C) These settings shall not contradict the storage conditions set out in Annex IV, Table 3	Freezing capacity (kg/24h)	Defrosting type (auto-defrost=A, manual defrost=M)
Pantry	No	-	-	-	-
Wine storage	No	-	-	-	-
Cellar	No	-	-	-	-
Fresh food	No	-	-	-	-

Chill	No	-	-	-	-
0-star or ice-making	No	-	-	-	-
1-star	No	-	-	-	-
2-star	No	-	-	-	-
3-star	No	-	-	-	-
4-star	No	-	-	-	-
2-star section	No	-	-	-	-
Variable temperature compartment	compartment types	143	+4 or -18	6.5(for 4-star compartments) or -	M
For 4-star compartments					
Fast freeze facility			No		
Light source parameters:					
Type of light source			-		
Energy efficiency class			-		
Minimum duration of the guarantee offered by the manufacturer: 24 months					
Additional information:					
Weblink to the manufacturer's website, where the information in point4(a) Annex of Commission Regulation (EU) 2019/2019 is found: www.techmart.bg					

Product Information Sheet

COMMISSION DELEGATED REGULATION (EU) 2019/2016

Supplier's name or trademark: Arielli

Supplier's address: Suhodolska 54, 1373 Sofia, BG

Model identifier: ACF-259CNE

Type of refrigerating appliance:

Low-noise appliance:	No	Design type:	freestanding
Wine storage appliance:	No	Other refrigerating appliance:	Yes

General product parameters:

Parameter		Value	Parameter	Value
Overall dimensions (millimetre)	Height	850	Total volume (dm ³ or l)	198
	Width	770		
	Depth	560		
EEI		100	Energy efficiency class	E
Airborne acoustical noise emissions (dB(A) re 1 pW)		41	Airborne acoustical noise emission class	C
Annual energy consumption (kWh/a)		200	Climate class:	extended temperate, temperate, subtropical,
Minimum ambient temperature (°C), for which the refrigerating appliance is suitable		10	Maximum ambient temperature (°C), for which the refrigerating appliance is suitable	38
Winter setting		No		

Compartment Parameters:

Compartment parameters and values					
Compartment type		Compartment volume (dm ³ or l)	Recommended temperature setting for optimised food storage (°C) These settings shall not contradict the storage conditions set out in Annex IV, Table 3	Freezing capacity (kg/24h)	Defrosting type (auto-defrost=A, manual defrost=M)
Pantry	No	-	-	-	-
Wine storage	No	-	-	-	-
Cellar	No	-	-	-	-
Fresh food	No	-	-	-	-

Chill	No	-	-	-	-
0-star or ice-making	No	-	-	-	-
1-star	No	-	-	-	-
2-star	No	-	-	-	-
3-star	No	-	-	-	-
4-star	No	-	-	-	-
2-star section	No	-	-	-	-
Variable temperature compartment	compartment types	198	+4 or -18	9.0(for 4-star compartments) or -	M
For 4-star compartments					
Fast freeze facility			No		
Light source parameters:					
Type of light source			-		
Energy efficiency class			-		
Minimum duration of the guarantee offered by the manufacturer: 24 months					
Additional information:					
Weblink to the manufacturer's website, where the information in point4(a) Annex of Commission Regulation (EU) 2019/2019 is found: www.techmart.bg					

Product Information Sheet

COMMISSION DELEGATED REGULATION (EU) 2019/2016

Supplier's name or trademark: Arielli

Supplier's address: Suhodolska 54, 1373 Sofia, BG

Model identifier: ACF-324CNE

Type of refrigerating appliance:

Low-noise appliance:	No	Design type:	freestanding
Wine storage appliance:	No	Other refrigerating appliance:	Yes

General product parameters:

Parameter		Value	Parameter	Value
Overall dimensions (millimetre)	Height	850	Total volume (dm ³ or l)	249
	Width	985		
	Depth	600		
EEI		100	Energy efficiency class	E
Airborne acoustical noise emissions (dB(A) re 1 pW)		41	Airborne acoustical noise emission class	C
Annual energy consumption (kWh/a)		216	Climate class:	extended temperate, temperate, subtropical, tropical
Minimum ambient temperature (°C), for which the refrigerating appliance is suitable		10	Maximum ambient temperature (°C), for which the refrigerating appliance is suitable	43
Winter setting		No		

Compartment Parameters:

Compartment parameters and values					
Compartment type		Compartment volume (dm ³ or l)	Recommended temperature setting for optimised food storage (°C) These settings shall not contradict the storage conditions set out in Annex IV, Table 3	Freezing capacity (kg/24h)	Defrosting type (auto-defrost=A, manual defrost=M)
Pantry	No	-	-	-	-
Wine storage	No	-	-	-	-
Cellar	No	-	-	-	-
Fresh food	No	-	-	-	-

Chill	No	-	-	-	-
0-star or ice-making	No	-	-	-	-
1-star	No	-	-	-	-
2-star	No	-	-	-	-
3-star	No	-	-	-	-
4-star	Yes	249	-18	11,5	M
2-star section	No	-	-	-	-
Variable temperature compartment	-	-	-	-	-
For 4-star compartments					
Fast freeze facility			No		
Light source parameters:					
Type of light source			-		
Energy efficiency class			-		
Minimum duration of the guarantee offered by the manufacturer: 24 months					
Additional information:					
Weblink to the manufacturer's website, where the information in point4(a) Annex of Commission Regulation (EU) 2019/2019 is found: www.techmart.bg					

Product Information Sheet

COMMISSION DELEGATED REGULATION (EU) 2019/2016

Supplier's name or trademark: Arielli

Supplier's address: Suhodolska 54, 1373 Sofia, BG

Model identifier: ACF-384CNE

Type of refrigerating appliance:

Low-noise appliance:	No	Design type:	freestanding
Wine storage appliance:	No	Other refrigerating appliance:	Yes

General product parameters:

Parameter		Value	Parameter	Value
Overall dimensions (millimetre)	Height	844	Total volume (dm ³ or l)	293
	Width	1065		
	Depth	592		
EEI		100	Energy efficiency class	E
Airborne acoustical noise emissions (dB(A) re 1 pW)		41	Airborne acoustical noise emission class	C
Annual energy consumption (kWh/a)		230	Climate class:	extended temperate, temperate, subtropical, tropical
Minimum ambient temperature (°C), for which the refrigerating appliance is suitable		10	Maximum ambient temperature (°C), for which the refrigerating appliance is suitable	43
Winter setting		No		

Compartment Parameters:

Compartment parameters and values					
Compartment type		Compartment volume (dm ³ or l)	Recommended temperature setting for optimised food storage (°C) These settings shall not contradict the storage conditions set out in Annex IV, Table 3	Freezing capacity (kg/24h)	Defrosting type (auto-defrost=A, manual defrost=M)
Pantry	No	-	-	-	-
Wine storage	No	-	-	-	-
Cellar	No	-	-	-	-
Fresh food	No	-	-	-	-

Chill	No	-	-	-	-
0-star or ice-making	No	-	-	-	-
1-star	No	-	-	-	-
2-star	No	-	-	-	-
3-star	No	-	-	-	-
4-star	No	-	-	-	-
2-star section	No	-	-	-	-
Variable temperature compartment	Yes	293	4 (for fresh food compartments) -18 (for 4-star compartments)	14,0(for 4-star compartments)	M
For 4-star compartments					
Fast freeze facility			No		
Light source parameters:					
Type of light source			-		
Energy efficiency class			-		
Minimum duration of the guarantee offered by the manufacturer: 24 months					
Additional information:					
Weblink to the manufacturer's website, where the information in point4(a) Annex of Commission Regulation (EU) 2019/2019 is found: www.techmart.bg					



Ръководство за употреба

Фризер

МОДЕЛ:


ACF-131CNE

ACF-186CNE

ACF-259CNE

ACF-324CNE

ACF-384CNE

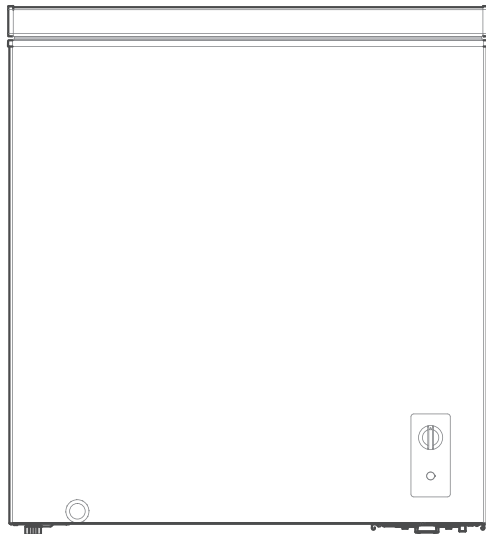

www.arielli.bg

Моля, прочетете внимателно ръководството преди употреба.
Ръководството трябва да се съхранява в добро състояние за бъдещи справки

СЪДЪРЖАНИЕ

1 Предупреждения за безопасност

- 1.1 Внимание**
- 1.2 Значение на предупредителните символи за безопасност**
- 1.3 Предупреждения, свързани с електричеството**
- 1.4 Предупреждения, свързани с употребата**
- 1.5 Предупреждения, свързани с разположението на продуктите**
- 1.6 Предупреждения, свързани с енергията**
- 1.7 Предупреждения, свързани с изхвърлянето**

2 Правилна употреба на фризера

- 2.1 Наименования на компонентите**
- 2.2 Контрол на температурата**
- 2.3 Позициониране**
- 2.4 Включване**
- 2.5 Съвети за пестене на енергия**

3 Поддръжка на фризера

- 3.1 Почистване**
- 3.2 Размразяване**
- 3.3 Спиране на употребата**

4 Отстраняване на неизправности

УВАЖАЕМИ КЛИЕНТИ:

Благодарим Ви, че закупихте този фризер. За да сте сигурни, че получавате най-доброто от новия си фризер, моля, отделете време да прочетете инструкциите в тази брошура. Моля, уверете се, че опаковъчният материал е изхвърлен в съответствие с приложимите екологични изисквания. При изхвърляне на каквото и да е оборудване за замразяване, моля, свържете се с местния отдел за обезвреждане на отпадъци за съвет относно безопасното изхвърляне. Този уред трябва да се използва само по предназначение.

1 Предупреждения за безопасност

1.1 Внимание



Внимание: риск от пожар / запалими материали

Този уред е предназначен за употреба в домакински и подобни приложения, като например:

- кухни за персонала, в магазини, офиси и друга работна среда;
- ферми, от клиенти в хотели, мотели и друга жилищна среда;
- хотели, предлагащи нощувка със закуска;
- за кетеринг услуги и подобни приложения за непромишлена употреба.

Ако захранващият кабел е повреден, той трябва да бъде подменен от производителя, неговия сервизен представител или лица с подобна квалификация, за да се избегнат рисковете.

Не съхранявайте взривни вещества като аерозолни кутии със запалим пропелант в този уред.

Уредът трябва да бъде изключен от захранването след употреба и преди извършването на потребителска поддръжка на уреда.

ВНИМАНИЕ: Опасност от пожар / запалими материали

ВНИМАНИЕ: Уверете се, че вентилационните отвори в корпуса на уреда или във вградената конструкция не са запушени.

ВНИМАНИЕ: Не използвайте механични устройства или други средства за ускоряване на процеса на размразяване, различни от препоръчаните от производителя.

ВНИМАНИЕ: Уверете се, че охладителната верига не е повредена.

ВНИМАНИЕ: Не използвайте електрически уреди в отделенията за съхранение на храна на уреда, освен ако не са от вида препоръчан от производителя.

ВНИМАНИЕ: Моля, изхвърлете хладилника съгласно местните регламенти за употребата на запалими газови хладилни агенти.

Когато позиционирате уреда, уверете се, че захранващият кабел не е затиснат или повреден.

Не използвайте удължителни кабели или адаптери.

ОПАСНОСТ: Риск от заклещване на деца. Преди да изхвърлите стария си хладилник или фризер:

Свалете вратите.

- Оставете рафтовете на място, така че децата да не могат лесно да се покатерят вътре.

Преди да започнете монтажа на аксесоар, уредът трябва да бъде изключен от захранването.

Хладилният агент и пенопластът от циклопентан използвани в хладилника са запалими.

Следователно, когато хладилникът се изхвърля, той трябва да се държи далеч от източници на пожар и да бъде предаден на специално дружество за рециклиране на отпадъци със съответната квалификация, а не да бъде унищожено чрез горене, за да се предотврати увреждането на околната среда или всякаква друга вреда.

За EN стандартите: Този уред може да се използва от деца на възраст над 8 години и лица с намалени физически или умствени способности или липса на опит и познания само под надзор или ако са били инструктирани относно безопасната употреба на уреда и разбират съответните рискове. Децата не трябва да си играят с уреда. Почистването и поддръжката не трябва да се извършват от деца без надзор.

За IEC стандартите: Този уред не е предназначен за употреба от лица (включително деца) с намалени физически, сетивни или психически способности, или липса на опит и познания, ако не са наблюдавани или инструктирани по този въпрос от лицето, отговарящо за безопасността им.

Уверете се, че децата не си играят с уреда.

За да избегнете замърсяване на храната, моля следвайте инструкциите по-долу:

- Отварянето на вратата за продължителен период може да причини значително повишаване на температурата в отделенията на фризера.

- Почиствайте редовно повърхностите, които са в контакт с храната и дренажната система.

- Почиствайте резервоарите за вода, ако не са използвани за повече от 48 часа; Промийте системата за вода, свързана с източник на захранване с вода, ако не е използвана за повече от 5 дни. (бележка 1).

- Съхранявайте сурово месо и риба в подходящи контейнери в хладилника, така че да не се докосват до другите храни.

- Отделенията с две звездички (**) за замразена грана са подходящи за дългосрочно съхранение на предварително замразена храна, сладолед и за приготвяне на кубчета лед. (бележка 2).

- Отделенията с една звездичка (*) - две (**) и три (***) звездички не са подходящи за замразяване на прясна храна (бележка 3).

- Ако фризерът е празен за дълъг период от време, изключете го, размразете го, почистете, изсушете и го оставете с отворена врата, за да предотвратите развитието на мухъл във вътрешността на уреда.


Бележки 1,2,3: Вижте дали бележките съответстват на вида на отделенията на Вашия уред.

1.2. Значение на предупредителните символи за безопасност

 Символи за забрана	Символите обозначават забранените действия и поведение. Неспазването на инструкциите може да доведе до увреждане на продукта и да застраши личната безопасност на потребителите.
 Предупредителни символи	Символите обозначават въпроси, които трябва да бъдат следвани и тези действия трябва да бъдат строго изпълнявани в съответствие с изискванията за експлоатация. Неспазването на инструкциите може да доведе до увреждане на продукта и да застраши личната безопасност на потребителите.
 Забележки	Символите посочват неща, на които трябва да се обърне внимание, и тези действия трябва да бъдат специално обозначени. Необходимо е да бъдат взети предпазни мерки, за да се избегне причиняването на леки или умерени наранявания или повреди на продукта.

Това ръководство съдържа много важна информация за безопасността, която трябва да се спазва от потребителите.


1.3. Предупреждения, свързани с електричеството

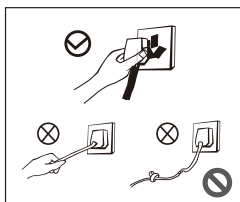

- Не дърпайте захранващия кабел, когато изключвате фризера от захранването. Моля, хванете здраво щепсела и го издърпайте директно от гнездото.

- Не повреждайте захранващия кабел при каквито и да е условия, за да се осигури безопасна употреба; не използвайте уреда, когато захранващия кабел е повреден или щепселът е износен.


- Износеният или повреден захранващ кабел трябва да бъде подменен в център за техническо обслужване, оторизиран от производителя.

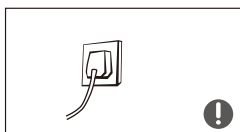

- Захранващият щепсел трябва да е здраво свързан към контакта, в противен случай може да бъде причинен пожар. Моля, уверете се, че заземителният електрод на гнездото е оборудван с надеждна заземяваща линия.




- Моля, изключете клапана на газа и отворете вратите и прозорците в случай на изтичане на газ и други запалими газове. Не изключвайте фризера и другите електрически уреди, тъй като искра може да предизвика пожар.

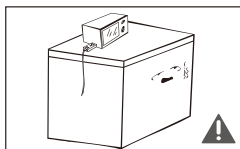


- За да се гарантира безопасността, не се препоръчва да се поставят регулатори, котлони, микровълнови фурни и други уреди върху фризера, с изключение на тези, препоръчани от производителя. Не използвайте електрически уреди в съда за храна.


1.4. Предупреждения, свързани с употребата

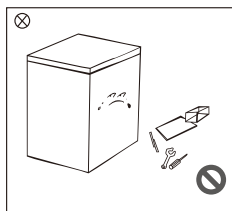


- Не разглобявайте произволно и не модифицирайте фризера, това може да повреди охладителната система; поддръжката на уреда трябва да се извършва от специалист;
- Повреденият захранващ кабел трябва да бъде подменен от производителя, неговия отдел за техническо обслужване или съответните професионалисти, за да се избегне опасността.

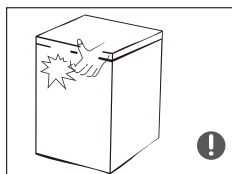


- Отворите между вратите на фризера и между вратите и тялото на фризера са малки, не поставяйте ръката си в тези области, за да предотвратите прищипване на пръстите Ви. Моля, бъдете внимателни, когато затваряте вратата на фризера, за да предотвратите падането на предмети.
- Не вземайте храна или кутии с мокри ръце от хладилната камера, когато фризерът работи (особено метални контейнери), за да избегнете замръзване.

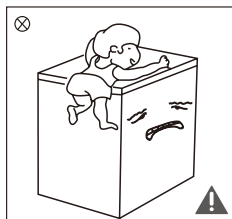


- Не позволявайте на деца да влизат в или да се качват върху фризера, за да предотвратите заклещването на децата във фризера или нараняването на децата вследствие на падане на фризера.
- Не пръскайте или мийте фризера с вода; не поставяйте фризера на влажни места, тъй като може лесно да бъде напръскан с вода, което ще повлияе на електрическите изолационни свойства на фризера.

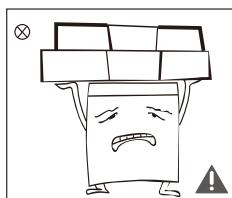


- Не поставяйте тежки предмети върху фризера, тъй като при отварянето на вратата предметите могат да паднат и да доведат до случайни наранявания.
- Моля, издърпайте щепсела в случай на прекъсване на захранването или почистване. Не свързвайте фризера към електрическото захранване в рамките на пет минути, за да предотвратите повреда на компресора поради последователното включване и изключване.

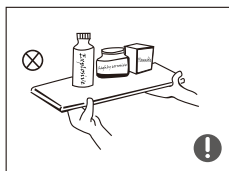

- Не поставяйте запалими, експлозивни, летливи и силно корозиращи елементи във фризера, за да предотвратите повреда на продукта или пожар.

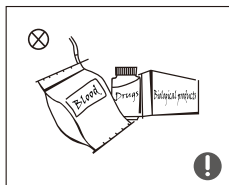

- Не поставяйте запалими предмети в близост до фризера, за да избегнете пожари.
- Този продукт е фризер за битова употреба и е подходящ само за съхранение на храни. Съгласно националните стандарти, фризерът за битова употреба не трябва да се използва за други цели, като съхраняване на кръв, лекарства или биологични продукти.

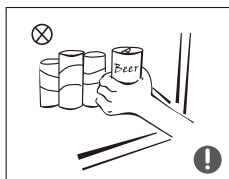

- * Не поставяйте във фризера продукти като бутилирани или запечатани контейнери с течности, като например бутилирани бири и напитки, за да предотвратите тяхното спукване или други загуби.

1.6 Предупреждения, свързани с енергията

- 1) Фризерът може да не работи непрекъснато, когато е поставен за продължителен период от време в края на студения диапазон от температури, за които е проектиран.
- 2) Ефервесцентните напитки не трябва да се съхраняват в хладилни отделения или шкафове или в нискотемпературни отделения.
- 3) Не трябва да се надвишава времето за съхранение, препоръчано от производителите на храни, за всякакъв вид храна и особено за бързо замразени храни, в отделения или шкафове за съхранение и замразяване на храни;
- 4) Необходими са предпазни мерки за предотвратяване на ненужно повишаване на температурата на замразената храна при размразяване на хладилния уред, като опаковане на замразената храна в няколко слоя вестници.
- 5) Повишаването на температурата на замразената храна при ръчно размразяване, поддръжка или почистване може да съкрати срока на съхранение.
- 6) В случай на врати или капаци, оборудвани с ключалки и ключове е необходимо ключовете да се държат далеч от достъпа на деца, а не в близост до фризера, за да се предотврати заключването на децата вътре.

1.7 Предупреждения, свързани с изхвърлянето

Хладилният агент и циклопентанът, използвани в хладилника, са запалими материали и изхвърлените фризери трябва да бъдат изолирани от източници на огън и не могат да бъдат изгорени. Моля, предайте фризера на квалифицирани професионални компании за рециклиране за преработка, за да избегнете увреждане на околната среда или други опасности.

Моля, отстранете вратата на фризера и поставете рафтовете правилно, за да избегнете инциденти, свързани с деца, които влизат и си играят във фризера.



Правилно изхвърляне на този продукт:

Тази маркировка показва, че този продукт не трябва да се изхвърля заедно с други битови отпадъци.

За да се предотврати възможна вреда за околната среда или човешкото здраве от неконтролирано изхвърляне на отпадъци, рециклирайте го отговорно, за да насърчите устойчивото повторно използване на материалните ресурси. За да върнете използвания уред, моля, използвайте системите за връщане и събиране на отпадъци или се свържете с търговеца, от който е закупен уреда. Той може да приеме този продукт за безопасно екологично рециклиране.

2.Правилна употреба на фризера

2.1 Наименования на компонентите




(Илюстрацията по-горе е само за справка. Реалната конфигурация на закупения от Вас продукт може да се различава)

- Ниската температура на фризера може да запази храната Ви свежа за дълго време и се използва главно за съхраняване на замразени храни и правене на лед.
- Фризерът е подходящ за съхранение на месо, риба, скариди, кнедли, оризови топчета и други храни, които не се консумират в краткосрочен план.
- За предпочитане е месото да бъде разделено на малки парчета за лесен достъп.
Моля, имайте предвид, че храната трябва да се консумира в рамките на срока на съхранение.

Бележка:

След дълъг период на употреба, пантите може да имат следи от износване, което причинява шум при отваряне и затваряне на вратата и намалява живота на пантите. Препоръчително е да поставите смазочна течност на пантите, за редовна поддръжка. Това може ефективно да елиминира шума и да удължи експлоатационния живот на пантите.


2.2 Контрол на температурата

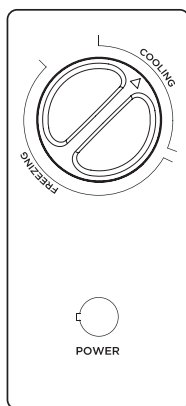


- Моля, включете фризера, индикаторната лампичка POWER ще светне.
- Завъртете бутона на терморегулатора по посока на часовниковата стрелка, температурата във фризера ще става все по-ниска.
- "COOLING" означава охлаждаща зона, "FREEZING" означава зона за замразяване.

(Илюстрацията по-горе е само за справка. Реалната конфигурация на закупения от Вас продукт може да се различава)


2.3. Позициониране

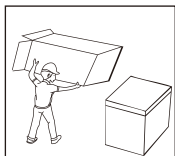


Преди да използвате фризера, отстранете всички опаковъчни материали, включително стиропорения и пенливия пълнеж във вътрешността на фризера, както и скъсайте защитното фолио на вратата и корпуса на фризера.

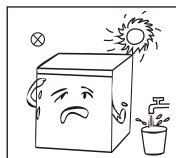

Дръжте далеч от топлина и избягвайте директна слънчева светлина. Не поставяйте фризера във влажни или мокри пространства, за да избегнете ръждата или намаляването на изолационния ефект.

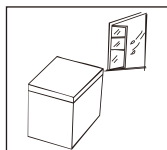


Фризерът трябва да бъде поставен на добре вентилирано място; подът трябва да е равен и стабилен.

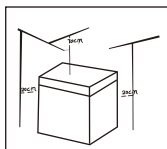

Пространството над горната част на фризера трябва да е повече от 70 см, а разстоянието между стената и двете странични и задната част трябва да е най-малко 20 см, за да се улесни разсейването на топлината.

2.4. Включване

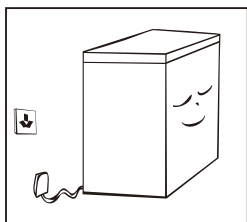

Фризерът трябва да остане неподвижен в продължение на половин час след позиционирането, преди да се свърже захранването.

Фризерът трябва да работи 2 до 3 часа преди зареждането на пресни или замразени храни; Фризерът трябва да работи повече от 4 часа през лятото, като се има предвид, че температурата на околната среда е висока.

2.5. Съвети за пестене на енергия

- Уредът трябва да се намира в най-прохладната зона на помещението, далеч от отоплителните уреди или от отоплителните канали и извън пряка слънчева светлина.
- Оставете горещите храни да се охладят до стайна температура, преди да ги поставите в уреда. Претоварването на уреда принуждава компресора да работи по-дълго. Храните, които се замразяват прекалено бавно, могат да загубят качеството си или да се развалят.
- Не забравяйте да опаковате правилно храните, преди да ги поставите в уреда. Това намалява образуването на лед вътре в уреда.
- Резервоарът за съхранение не трябва да е облицован с алуминиево фолио, восьчнна хартия или хартиена хартия. Това пречи на циркулацията на студения въздух, което прави уреда по-малко ефективен.
- Организирайте и маркирайте храната, за да намалите отварянето на вратата и продължителните търсения. Изваждайте колкото се може повече неща наведнъж и затваряйте вратата възможно най-бързо.

3 Поддръжка на фризера

3.1 Почистване

- Прахът зад фризера и на земята трябва да се почиства своевременно, за да подобрятохлаждащия ефект и пестенето на енергия.
- Проверявайте редовно уплътненията на вратата, за да се уверите, че няма остатъци от храна. Почиствайте редовно с мека кърпа, напоена със сапунена вода.
- За почистване се препоръчват меки кърпи или гъба, напоена с вода, и неутрални почистващи препарати. Фризерът трябва да бъде окончателнопочистен с чиста вода и суха кърпа. Отворете вратата за естествено изсушаване предивключването на захранването.
- За местата, които са трудно достъпни за почистване (като ъгли и отвори) е препоръчително да ги почиствате редовно с мека кърпа, мека четка и ако е необходимо с други четки за почистване.
- Не използвайте твърди четки, чисти стоманени топки, телени четки, абразиви като пасти за зъби, органични разтворители (като алкохол, ацетон, бананово масло и др.), Кипяща вода, киселинни или алкални продукти при почистването на фризера, тъй като това може да повреди повърхността и вътрешността на фризера.
- Не изплаквайте с вода, за да не повлияете на електрическите свойства на изолацията. Моля, използвайте суха кърпа, когато почиствате копчето за регулиране на температурата и електрическите компоненти.



Моля, изваждайте щепсела от контакта при размразяване и почистване.

3.2 Размразяване

- * Фризерът трябва да бъде размразен ръчно.
Изключете фризера от контакта и отворете вратата на фризера, отстранете храните и кошницата преди размразяване; Отворете отворите за оттичане и дренажните отвори (поставете контейнера за вода на мястото на дренажните отвори); замразяването, което се е натрупало във вътрешността ще сте размрази по естествен начин; избършете водата от размразяването със суха, мека кърпа. Когато ледът омекне, може да се използва стъргалка за лед за ускоряване на процеса на размразяване.
- Моля, отстранете храната и я поставете на хладно място, когато размразявате, преди да свалите аксесоарите.



Не използвайте механични устройства или други средства за ускоряване на процеса на размразяване, различни от препоръчаните от производителя. Това ще повреди охладителната верига.

3.3 Спиране на употребата

Храната може да се запази за няколко часа дори през лятото в случай на прекъсване на електрозахранването; Препоръчва се да намалите честотата на отваряне на вратата и да не поставяте пресни храни във фризера. Моля, изключвайте захранването на фризер, който не е използван за дълъг период от време, за да го почистите. Дръжте вратата отворена, за да избегнете лошата миризма.

Не обръщайте наобратно или хоризонтално фризера, не го разклащайте, носещият ъгъл не трябва да е по-голям от 45°. Моля, дръжте вратата и пантата, когато го пренасяте.



При включване на фризера се препоръчва продължителна работа. Моля, не местете фризера при нормални условия на експлоатация, тъй като това може да повлияе на експлоатационния му живот.

4 Отстраняване на неизправности

Следните проблеми могат да бъдат решени от потребителя. Моля, обадете се на отдела за следпродажбено обслужване, ако те не могат да се решат.

Не работи	Проверете дали фризерът е свързан към захранването; Ниско напрежение; Проверете дали бутонът за регулиране на температурата е настроен правилно Повреда в електрическата верига или късо съединение.
Миризма	Храните с миризма трябва да бъдат плътно опаковани; Проверете дали няма развалена храна; Проверете дали вътрешността не трябва да се почисти.
Продължителна работа на компресора	Нормално е фризерът да работи по-дълго време през лятото, когато температурата на околната среда е по-висока; Не поставяйте твърде много храна във фризера наведнъж; Не поставяйте храни, докато не се охладят; Често отваряне на вратата на фризера Дебел слой замръзване (необходимо е размразяване)
Светлината на индикатора на свети	Проверете дали фризерът е включен в захранването; Проверете дали лампата на индикатора не е повредена;
Вратата на фризера не може да се затвори правилно	Вратата на фризера е заседнала от опаковките с храна; Прекалено много храна; Наклонете фризера.
Силни шумове	Проверете дали храната е поставена правилно; дали фризерът е балансиран; дали частите на фризера са правилно поставени.
Краткотрайна трудност при отваряне на вратата	След замразяване ще има разлика в налягането между вътрешната и външната страна на фризера, която ще доведе до краткотрайна трудност при отваряне на вратата. Това е нормално физическо явление.
Охладителна камера Топлинна кондензация	Охладителната камера може да излъчва топлина по време на работа, особено през лятото това се дължи на излъчването на кондензатора и това е нормално явление. Кондензация: кондензацията се наблюдава върху външната повърхност и уплътненията на вратата на фризера, когато влажността на околната среда е голяма, това е нормално явление и може да се изтрие със суха кърпа.
Звук от въздушен поток : Бръмчене Тракане	Циркулирането на хладилните агенти в охладителната верига предизвиква звуци, което нормално не влияе на охлаждащия ефект. Бръмчене се генерира от работата на компресора, особено при включване или изключване. Соленоидният клапан или електрическият клапан ще изтрака, което е нормално явление и не влияе на работата.
v.	

Таблица 1 Климатични класове

Клас	Символ	Диапазон на температурата на околната среда °C
Разширен умерен	SN	+ 10 до + 32
Умерен	N	+ 16 до + 32
Субтропичен	ST	+ 16 до + 38
Тропичен	T	+ 16 до + 43

Разширен умерен: този хладилен уред е предназначен за използване при температура на околната среда от 10 °C до 32 °C;

Умерен: този хладилен уред е предназначен за използване при температура на околната среда от 16 °C до 32 °C;

Субтропичен: този хладилен уред е предназначен за използване при температури на околната среда от 16 °C до 38 °C;

Тропичен: "Този хладилен уред е предназначен за използване при температури на околната среда от 16 °C до 43 °C;

Специално за новите европейски стандарти:

Поръчаните части в следната таблица могат да бъдат закупени от канал_:

Поръчана част	Предоставено от	Минимално необходимо време за предоставяне
термостати	Професионален персонал по поддръжката	Най-малко 7 години след пускането на пазара на последния модел
температурни сензори	Професионален персонал по поддръжката	Най-малко 7 години след пускането на пазара на последния модел
печатни платки	Професионален персонал по поддръжката	Най-малко 7 години след пускането на пазара на последния модел
източници на светлина	Професионален персонал по поддръжката	Най-малко 7 години след пускането на пазара на последния модел
дръжки на вратата	Професионални сервиси и крайни потребители	Най-малко 7 години след пускането на пазара на последния модел
панти на вратата	Професионални сервиси и крайни потребители	Най-малко 7 години след пускането на пазара на последния модел
рафтове	Професионални сервиси и крайни потребители	Най-малко 7 години след пускането на пазара на последния модел
кошници	Професионални сервиси и крайни потребители	Най-малко 7 години след пускането на пазара на последния модел
уплътнения за вратата	Професионални сервиси и крайни потребители	Най-малко 10 години след пускането на пазара на последния модел

- Най-краткият срок за предоставяне на резервни части след продажбата е 15 работни дни.

Информацията за модела в продуктовата база данни, както и идентификаторът на модела, могат да бъдат получени чрез уебвръзка, сканирана чрез QR код върху етикетата за енергийна ефективност на продукта.

Уважаеми клиенти

1. Ако искате да върнете или замените продукта, моля, обърнете се към магазина, откъдето сте го закупили. (Не забравяйте да представите фактурата за покупката)

2. Ако продуктът Ви се повреди и трябва да се ремонтира, моля, свържете се с доставчика за следпродажбено обслужване.

Телефон:

Електронна поща:



Изхвърляне на електрическо и електронно оборудване (ОЕЕО).

Продуктът е разработен и произведен от висококачествени материали и компоненти, които могат да бъдат рециклирани и използвани повторно. Този символ означава, че електрическото и електронното оборудване трябва да се изхвърлят отделно от битовите отпадъци. Моля изхвърляйте това оборудване в местния център за

събиране на отпадъци / център за рециклиране.

Има отделни системи за събиране на използвани електрически и електронни продукти. Моля да ни помогнете за опазването на околната среда.



Този продукт е разработен и отговаря на всички Европейски директиви и изисквания.

Продуктов информационен лист

СЪГЛАСНО ДЕЛЕГИРАН РЕГЛАМЕНТ (ЕС) 2019/2016 НА КОМИСИЯТА

Име или търговска марка на доставчика: Arielli

Адрес на доставчика: ул. Суходолска 54, 1373 София, България

Идентификатор на модела: ACF-131CNE

Тип хладилен уред:

Уред с ниско ниво на шум:	Не	Тип конструкция:	свободностоящ
Охладител за вино	Не	Друг хладилен уред:	Да

Основни параметри на продукта:

Параметър		Стойност	Параметър	Стойност
Габаритни размери (милиметри)	Височина	850	Общ обем (dm ³ или l)	99
	Ширина	547		
	Дълбочина	446		
ИЕЕ		100	Клас на енергийна ефективност	E
Емисия на въздушен шум (dB(A) re 1 pW)		38	Клас на емисията на въздушен шум	C
Годишно енергопотребление (kWh/a)		169	Климатичен клас:	SN, N , ST
Минимална околна температура (°C), за която хладилният уред е подходящ		10	Максимална околна температура (°C), за която хладилният уред е подходящ	38
Зимни настройки		Не		

Параметри на отделението:

Тип отделение		Параметри и стойности на отделението			
		Обем на отделението (dm ³ или l)	Препоръчителна температура за оптимално съхранение на хранителни продукти(°C) Тези настройки не трябва да противоречат на условията за съхранение, определени в таблица 3 от Приложение IV	Капацитет на замразяване (kg/24h)	Вид обезскрежаване (автоматично обезскрежаване= А, ръчно обезскрежаване= Р)
Отделение за трайни продукти	Не	-	-	-	-
Охладител за вино	Не	-	-	-	-
Отделение тип "зимник"	Не	-	-	-	-
Пресни храни	Не	-	-	-	-
Лесно развалящи се храни	Не	-	-	-	-
0-звезди или ледогенератор	Не	-	-	-	-

1-звезда	He	-	-	-	-
2-звезди	He	-	-	-	-
3-звезди	He	-	-	-	-
4-звезди	He	-	-	-	-
секция 2 звезди	He	-	-	-	-
Отделение с променлива температура	отделение типове	99	+4 or -18	4.5(за отделения с 4 звезди или	M
Параметри на светлинния източник					
Тип на светлинния източник			-		
Клас на енергийна ефективност			-		
Минимален срок на гаранцията предложена от производителя: 24 месеца					
Допълнителна информация					
Препратка към уебсайта на производителя, където се намира информацията по точка 4, буква а) от приложение към Регламент (ЕС)2019/2019 на Комисията: www.techmart.bg					

Продуктов информационен лист

СЪГЛАСНО ДЕЛЕГИРАН РЕГЛАМЕНТ (ЕС) 2019/2016 НА КОМИСИЯТА

Име или търговска марка на доставчика: Arielli

Адрес на доставчика: ул. Суходолска 54, 1373 София, България

Идентификатор на модела: ACF-186CNE

Тип хладилен уред:

Уред с ниско ниво на шум:	Не	Тип конструкция:	свободностоящ
Охладител за вино	Не	Друг хладилен уред:	Да

Основни параметри на продукта:

Параметър		Стойност	Параметър	Стойност
Габаритни размери (милиметри)	Височина	850	Общ обем (dm ³ или l)	143
	Ширина	600		
	Дълбочина	560		
ИЕЕ		100	Клас на енергийна ефективност	E
Емисия на въздушен шум (dB(A) re 1 pW)		40	Клас на емисията на въздушен шум	C
Годишно енергопотребление (kWh/a)		182	Климатичен клас:	SN, N , ST
Минимална околна температура (°C), за която хладилният уред е подходящ		10	Максимална околна температура (°C), за която хладилният уред е подходящ	38
Зимни настройки		Не		

Параметри на отделението:

Тип отделение		Параметри и стойности на отделението			
		Обем на отделението (dm ³ или l)	Препоръчителна температура за оптимално съхранение на хранителни продукти(°C) Тези настройки не трябва да противоречат на условията за съхранение, определени в таблица 3 от Приложение IV	Капацитет на замразяване (kg/24h)	Вид обезскрежаване (автоматично обезскрежаване= А, ръчно обезскрежаване= Р)
Отделение за трайни продукти	Не	-	-	-	-
Охладител за вино	Не	-	-	-	-
Отделение тип "зимник"	Не	-	-	-	-
Пресни храни	Не	-	-	-	-
Лесно развалящи се храни	Не	-	-	-	-
0-звезди или ледогенератор	Не	-	-	-	-

1-звезда	He	-	-	-	-
2-звезди	He	-	-	-	-
3-звезди	He	-	-	-	-
4-звезди	He	-	-	-	-
секция 2 звезди	He	-	-	-	-
Отделение с променлива температура	отделение типове	143	+4 or -18	6.5(за отделения с 4 звезди или	M
Параметри на светлинния източник					
Тип на светлинния източник			-		
Клас на енергийна ефективност			-		
Минимален срок на гаранцията предложена от производителя: 24 месеца					
Допълнителна информация					
Препратка към уебсайта на производителя, където се намира информацията по точка 4, буква а) от приложение към Регламент (ЕС)2019/2019 на Комисията: www.techmart.bg					

Продуктов информационен лист

СЪГЛАСНО ДЕЛЕГИРАН РЕГЛАМЕНТ (ЕС) 2019/2016 НА КОМИСИЯТА

Име или търговска марка на доставчика: Arielli

Адрес на доставчика: ул. Суходолска 54, 1373 София, България

Идентификатор на модела: ACF-259CNE

Тип хладилен уред:

Уред с ниско ниво на шум:	Не	Тип конструкция:	свободностоящ
Охладител за вино	Не	Друг хладилен уред:	Да

Основни параметри на продукта:

Параметър		Стойност	Параметър	Стойност
Габаритни размери (милиметри)	Височина	850	Общ обем (dm ³ или l)	198
	Ширина	770		
	Дълбочина	560		
ИЕЕ		100	Клас на енергийна ефективност	Е
Емисия на въздушен шум (dB(A) re 1 pW)		41	Клас на емисията на въздушен шум	С
Годишно енергопотребление (kWh/a)		200	Климатичен клас:	SN, N , ST
Минимална околна температура (°C), за която хладилният уред е подходящ		10	Максимална околна температура (°C), за която хладилният уред е подходящ	38
Зимни настройки		Не		

Параметри на отделението:

Тип отделение		Параметри и стойности на отделението			
		Обем на отделението (dm ³ или l)	Препоръчителна температура за оптимално съхранение на хранителни продукти(°C) Тези настройки не трябва да противоречат на условията за съхранение, определени в таблица 3 от Приложение IV	Капацитет на замразяване (kg/24h)	Вид обезскрежаване (автоматично обезскрежаване= А, ръчно обезскрежаване= Р)
Отделение за трайни продукти	Не	-	-	-	-
Охладител за вино	Не	-	-	-	-
Отделение тип "зимник"	Не	-	-	-	-
Пресни храни	Не	-	-	-	-
Лесно развалящи се храни	Не	-	-	-	-
0-звезди или ледогенератор	Не	-	-	-	-

1-звезда	He	-	-	-	-
2-звезди	He	-	-	-	-
3-звезди	He	-	-	-	-
4-звезди	He	-	-	-	-
секция 2 звезди	He	-	-	-	-
Отделение с променлива температура	отделение типове	198	+4 or -18	9.0(за отделения с 4 звезди или	М
Параметри на светлинния източник					
Тип на светлинния източник			-		
Клас на енергийна ефективност			-		
Минимален срок на гаранцията предложена от производителя: 24 месеца					
Допълнителна информация					
Препратка към уебсайта на производителя, където се намира информацията по точка 4, буква а) от приложение към Регламент (ЕС)2019/2019 на Комисията: www.techmart.bg					

Продуктов информационен лист

СЪГЛАСНО ДЕЛЕГИРАН РЕГЛАМЕНТ (ЕС) 2019/2016 НА КОМИСИЯТА

Име или търговска марка на доставчика: Arielli

Адрес на доставчика: ул. Суходолска 54, 1373 София, България

Идентификатор на модела: ACF-324CNE

Тип хладилен уред:

Уред с ниско ниво на шум:	Не	Тип конструкция:	свободностоящ
Охладител за вино	Не	Друг хладилен уред:	Да

Основни параметри на продукта:

Параметър		Стойност	Параметър	Стойност
Габаритни размери (милиметри)	Височина	850	Общ обем (dm ³ или l)	249
	Ширина	985		
	Дълбочина	600		
ИЕЕ		100	Клас на енергийна ефективност	Е
Емисия на въздушен шум (dB(A) re 1 pW)		41	Клас на емисията на въздушен шум	С
Годишно енергопотребление (kWh/a)		216	Климатичен клас:	SN, N , ST, T
Минимална околна температура (°C), за която хладилният уред е подходящ		10	Максимална околна температура (°C), за която хладилният уред е подходящ	43
Зимни настройки		Не		

Параметри на отделението:

Тип отделение		Параметри и стойности на отделението			
		Обем на отделението (dm ³ или l)	Препоръчителна температура за оптимално съхранение на хранителни продукти(°C) Тези настройки не трябва да противоречат на условията за съхранение, определени в таблица 3 от Приложение IV	Капацитет на замразяване (kg/24h)	Вид обезскрежаване (автоматично обезскрежаване= А, ръчно обезскрежаване= Р)
Отделение за трайни продукти	Не	-	-	-	-
Охладител за вино	Не	-	-	-	-
Отделение тип "зимник"	Не	-	-	-	-
Пресни храни	Не	-	-	-	-
Лесно развалящи се храни	Не	-	-	-	-
0-звезди или ледогенератор	Не	-	-	-	-

1-звезда	Не	-	-	-	-
2-звезди	Не	-	-	-	-
3-звезди	Не	-	-	-	-
4-звезди	Да	249	-18	11,5	М
секция 2 звезди	Не	-	-	-	-
Отделение с променлива температура	-	-	-	-	-
Параметри на светлинния източник					
Тип на светлинния източник			-		
Клас на енергийна ефективност			-		
Минимален срок на гаранцията предложена от производителя: 24 месеца					
Допълнителна информация					
Препратка към уебсайта на производителя, където се намира информацията по точка 4, буква а) от приложение към Регламент (ЕС)2019/2019 на Комисията: www.techmart.bg					

Продуктов информационен лист

СЪГЛАСНО ДЕЛЕГИРАН РЕГЛАМЕНТ (ЕС) 2019/2016 НА КОМИСИЯТА

Име или търговска марка на доставчика: Arielli

Адрес на доставчика: ул. Суходолска 54, 1373 София, България

Идентификатор на модела: ACF-384CNE

Тип хладилен уред:

Уред с ниско ниво на шум:	Не	Тип конструкция:	свободностоящ
Охладител за вино	Не	Друг хладилен уред:	Да

Основни параметри на продукта:

Параметър		Стойност	Параметър	Стойност
Габаритни размери (милиметри)	Височина	844	Общ обем (dm ³ или l)	293
	Ширина	1065		
	Дълбочина	592		
ИЕЕ		100	Клас на енергийна ефективност	Е
Емисия на въздушен шум (dB(A) re 1 pW)		41	Клас на емисията на въздушен шум	С
Годишно енергопотребление (kWh/a)		230	Климатичен клас:	SN, N , ST, T
Минимална околна температура (°C), за която хладилният уред е подходящ		10	Максимална околна температура (°C), за която хладилният уред е подходящ	43
Зимни настройки		Не		

Параметри на отделението:

Тип отделение		Параметри и стойности на отделението			
		Обем на отделението (dm ³ или l)	Препоръчителна температура за оптимално съхранение на хранителни продукти(°C) Тези настройки не трябва да противоречат на условията за съхранение, определени в таблица 3 от Приложение IV	Капацитет на замразяване (kg/24h)	Вид обезскрежаване (автоматично обезскрежаване= А, ръчно обезскрежаване= Р)
Отделение за трайни продукти	Не	-	-	-	-
Охладител за вино	Не	-	-	-	-
Отделение тип "зимник"	Не	-	-	-	-
Пресни храни	Не	-	-	-	-
Лесно развалящи се храни	Не	-	-	-	-
0-звезди или ледогенератор	Не	-	-	-	-

1-звезда	Не	-	-	-	-
2-звезди	Не	-	-	-	-
3-звезди	Не	-	-	-	-
4-звезди	Не	-	-	-	-
секция 2 звезди	Не	-	-	-	-
Отделение с променлива температура	Да	293	4 (фа отделения за прясна храна) -18 (за отделения с 4 звезди или)	14,0(за отделения с 4 звезди или)	М
Параметри на светлинния източник					
Тип на светлинния източник			-		
Клас на енергийна ефективност			-		
Минимален срок на гаранцията предложена от производителя: 24 месеца					
Допълнителна информация					
Препратка към уебсайта на производителя, където се намира информацията по точка 4, буква а) от приложение към Регламент (ЕС)2019/2019 на Комисията: www.techmart.bg					